



PREDATOR 5

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.



*Age Recommendation:
Not for children under
14 years. This is not a
toy.*

NOTICE: This product is only intended for use with unmanned, hobby-grade, remote-controlled vehicles and aircraft. FOXEEER disclaims all liability outside of the intended purpose and will not provide warranty service related thereto.

SUPPORT: Visit www.foxeer.com/ to get more information.

 
CAMERA-OSD SWITCH CONNECTION

3 Pin To Video Transmitter



Camera Back


2 Pin To OSD Switch board



OSD Switch Front


Mini / Micro

3 Pin To Video Transmitter

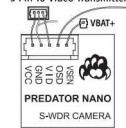

Nano

 2 Pin To OSD Switch board



VCC DC 4.5-20V In (Red)
GND Ground Wire(Black)
VID Video out(Yellow)
VSEN Voltage Sensor(Blue)
OSD OSD (White)

* Connect the VSEN cable Whenever you want to detect the voltage

CAUTION: If you are using ESC's with active braking, we recommend powering the camera system through a BEC or voltage regulator.

CAMERA-VIDEO TRANSMITTER CONNECTION

To connect the camera directly to the video transmitter, plug the 3 pin wiring harness from the video transmitter into the camera leaving the OSD pin open.

FPV OSD Setup

Press top button for 3s, you can access OSD menu.

DISPLAY	ON
TIME	ON
POWER	ON
VOL ALARM	3.6
V CAL	0.0
MODE	DAY
N/P	PAL
SIZE	4:3
CROSSHAIRS	OFF
VER: FOXEEER_V5.0	
EXIT	

1. TIME: ON/OFF
 2. POWER: ON/OFF
 3. VOL ALARM: You can setup a bat boundary (single), click LEFT/RIGHT button to decrease/increase the value, 3.6V default.
 4. V CAL: Voltage calibration, range -0.5~0.5.
 5. MODE: DAY/ NIGHT/ LED/ B&W.
- Quick switch:** At standby status, long press the right button on OSD board, it can fast change the MODE, the current mode will show once at the TIMER place.
6. N/P: NTSC/PAL switchable.
 7. SIZE: 4:3/16:9 switchable.
 8. CROSSHAIRS: ON/OFF
 9. VER: FOXEEER_V5.0.

Main MENU

SETUP MENU	
CAMERA ID	ON
PICT ADJUST	
DAY / NIGHT	AUTO
LANGUAGE	ENGLISH
CAMERA RESET	YES
EXIT	

MENU: Push MENU(center button) to go to the main menu.

UP/DOWN: Move up and down through the menu.

Left/Right: Modify the menu parameters.

1. Camera ID

Camera ID: ON/OFF. You can setup pilot name and position.

CAMERA ID	00:00	00:0
FOXEEER		
A B C D E F G H I J K L M N O P Q		
R S T U V W X Y Z 0 1 2 3 4 5 6 7 8		
9 - ! " # \$ % & ' () * , - . : ; < = > ? @		
~ ` ^ * + /		
← → ↑ ↓ CLR POS		
RETURN		

2. PICT ADJUST

PICT ADJUST	
FLIP	OFF
BRIGHTNESS	122
CONTRAST	136
SHARPNESS	160
HUE	090
COLOR GAIN	136
RETURN	

1. FLIP: OFF/ H-FLIP/ V-FLIP/ HV-FLIP
2. BRIGHTNESS
3. CONTRAST
4. SHARPNESS
5. HUE
6. COLOR GAIN

3. DAY/NIGHT

DAY/NIGHT include "AUTO" and "MANUAL", click "MANUAL", you can setup permanent "COLOR" or "B/W".

DAY/NIGHT	
DAY/NIGHT	COLOR
RETURN	

4. LANGUAGE

7 Languages: ENGLISH/ DEUTSCH/ FRANCAIS/ PYCCNN/ PORTUGUES/ ESPANOL/ 中文.

5. Camera reset

6. EXIT

Save All: Save all setup.

Not Save: Can save the value temporary, but once power off, the value won't save.

cancel: Cancel Setup.